



# EZ❖TRAC™ SCANNER INSTRUCTIONS




IMPORTANT COMPONENTS OF THE EZ❖TRAC™ SCANNER

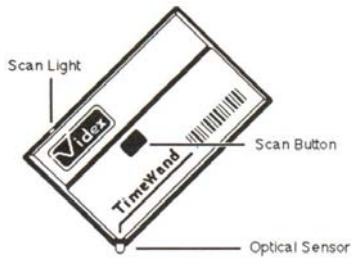

HOLD THE EZ❖TRAC™ SCANNER COMFORTABLY IN YOUR HAND, MAKING SURE THE CORNER WITH THE OPTICAL SENSOR IS POINTING AT THE BAR CODE

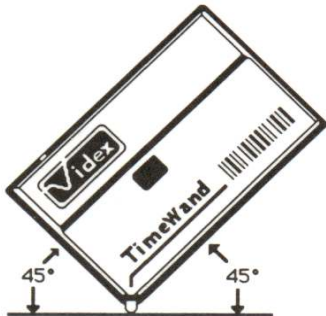

ALWAYS KEEP THE EZ❖TRAC™ SCANNER AT A 45° ANGLE TO THE BAR CODE AS YOU SCAN

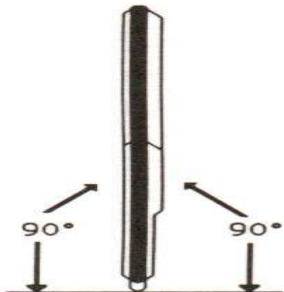

ALWAYS HOLD THE EZ❖TRAC™ SCANNER UPRIGHT

TO SCAN WITH THE EZ❖TRAC™ SCANNER, FOLLOW THESE SIMPLE STEPS:

1) HOLD SCANNER AS ILLUSTRATED TO THE LEFT

2) PRESS AND HOLD THE SCAN BUTTON DOWN

3) SWEEP THE SCANNER ACROSS THE BAR CODE ON THE ATTENDEES SCAN TAG, BEGINNING IN THE WHITE AREA BEFORE THE BAR CODE AND CONTINUING IN A SMOOTH, RAPID MOTION ACROSS THE ENTIRE BAR CODE. JUST LIGHTLY GLIDE ACROSS THE BAR CODE, DO NOT PRESS DOWN HARD.



4) BE SURE TO MAINTAIN THE ANGLES AS ILLUSTRATED TO THE LEFT. EXPERIMENT TO FIND THE SPEED AND ANGLE THAT WORKS BEST FOR YOU.

5) A SUCCESSFUL SCAN IS INDICATED BY AN AUDIBLE BEEP AND THE RED SCAN LIGHT. MAKE SURE YOU HEAR THE BEEP OR SEE THE SCAN LIGHT FOR EACH SCAN.

6) AFTER SCANNING THE ATTENDEE'S SCAN TAG, BE SURE TO RELEASE THE SCAN BUTTON BEFORE SCANNING THE NEXT TAG.